



# Chromebook


## Trackpad

### Left and Right Click

There are no buttons on the Chromebook trackpad.

To left-click, press down or tap on the trackpad.

To right-click, press down the touchpad with two fingers or hold Alt while doing a single finger click.

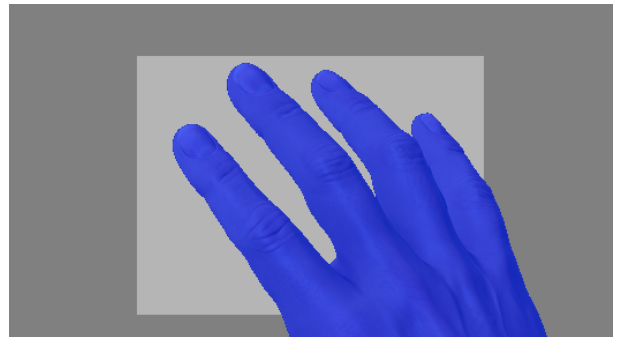

### Scrolling


To scroll on the Chromebook, move two fingers up and down or left and right on the touchpad.

If the vertical scrolling seems backwards to you (it goes up when you want it to go down), you can turn on Australian scrolling.



### Turning on Australian Scrolling

Click on the status area at the bottom right of the screen. Click on Settings.

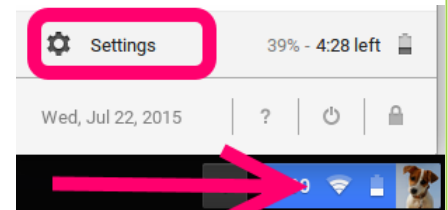

#### Device

Change settings specific to your device and peripherals.

Battery...

Stored data...

Touchpad speed:



Touchpad settings

Keyboard settings

Display settings

Under Device, click on Touchpad Settings.

Choose Australian scrolling to switch the direction of vertical scrolling.

#### Touchpad

Enable tap-to-click

Traditional scrolling

Australian scrolling [Learn more](#)

OK

Cancel